CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Piece	Description	Picture	Quantity
Α	L/FRONT LEG		1 X
В	R/FRONT LEG		1 X
C	CHAIR BACK		1 X
D	SEAT CUSHION WITH FRAME		1 X
E	L/STRETCHER		1 X
F	R/STRETCHER		1 X
G	FRONT STRETCHER		1 X
HW1	Hex Socket Bolt Ø5/16"-18 x 3-1/4"		4 X
HW2	Hex Socket Bolt Ø5/16"-18 x 2"	A	6 X
HW3	Allen Key		1 X
HW4	Wood Screw Ø8*40MM	Junus	6 X



Model# FOX6246 Product Dimensions:19-1/4"W*23-1/2"D*47-1/4"H

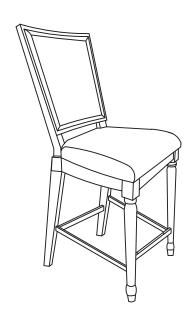



Weight Capacity: 275 lbs


WARNING:DO NOT STAND ON THE CHAIR

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:17 minutes.

Tools Required for Assembly: Allen key (included) & Phillips head screwdriver (not included)

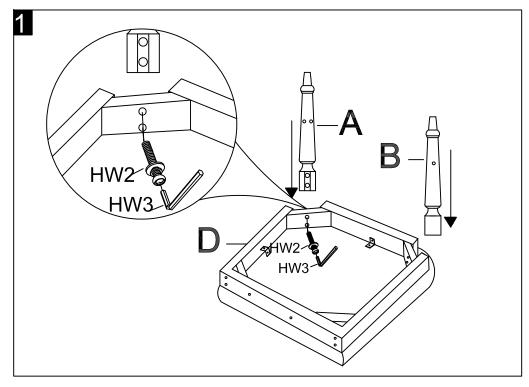

Step 1
Assemble legs (A) and (B) to the "Seat cushion with frame"(D).
Use Allen key (HW3) to lock with 4*Hex Socket bolts (HW2)

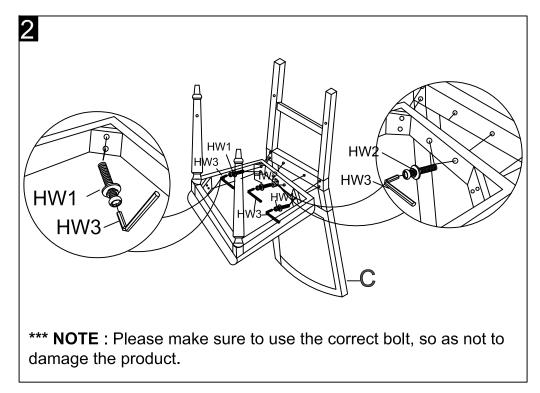

Step 2

Attach chair back (C) with the assembled seat frame/legs (as step1). Left and Right sides: Use Allen key (HW3) to lock with 4*Hex Socket bolts (HW1).


Two holes in the middle: Use Allen key (HW3) to lock with 2*Hex Socket bolts (HW2).

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:17 minutes.

Tools Required for Assembly: Allen key (included) & Phillips head screwdriver (not included)

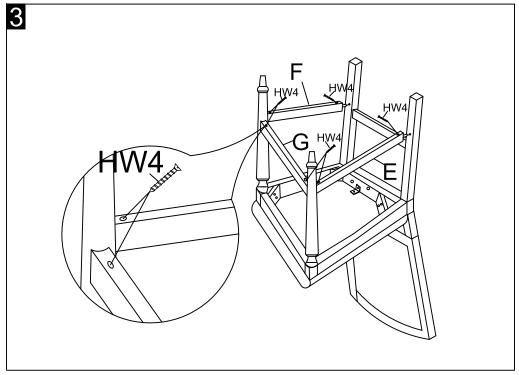

Step 3
Assemble 3*stretchers (E, F, G) with legs, By using a Phillips head screwdriver (not included) to lock with 6*Wood Screws (HW4).

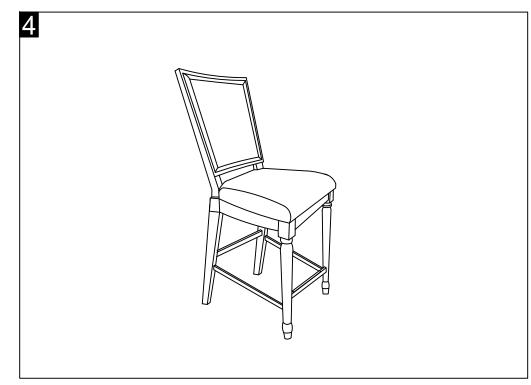

Step 4
Straighten up the assembled product, Assembly is completed.